

SMR1-201-BCPT-PAR16

Installation Instructions (Retrofit)(Blind Canopy Plate Trimless)

CAUTION!

READ AND FOLLOW ALL SAFETY AND INSTALLATION INSTRUCTIONS CAREFULLY. TURN OFF ELECTRICAL POWER BEFORE STARTING INSTALLATION.

WARNING - Before starting installation, disconnect power by turning off the circuit breaker or by removing the appropriate fuse at the fuse box. Do not install any luminaire assembly closer than 6" from any curtain or similar combustible materials. Risk of fire or electric shock. Luminaire wiring and electrical parts may be damaged when drilling for installation of LED retrofit kit. Check for enclosed wiring and components. Risk of fire or electric shock. LED Retrofit Kit installation requires knowledge of luminaires electrical systems. If not qualified, do not attempt installation. Contact a qualified electrician. Risk of fire or electric shock. Install this kit only in luminaires that have the construction features and dimensions shown in the photographs and/or drawings and where the input rating of the retrofit kit does not exceed the input rating of the luminaire. To prevent wiring damage or abrasion, do not expose wiring to edges of sheet metal or other sharp objects. Do not make or alter any open holes in an enclosure of wiring or electrical components during kit installation. **Consult a qualified electrician before installing. Work should be performed by qualified personnel.**

Suitable to install on **"Dimming Circuits"**.

SAVE THESE INSTRUCTIONS

1. Remove old fixture (if applicable).
Expose the supply wiring from the outlet box.
The hole in the ceiling must be at least 3.5" and at most 4.5".




2. CLARTÉ's Blind Canopy Plate fits into a 4-0 J-Box with
Plaster Mud Flange with screw holes 2 3/4" apart

3. Connect the Fixture BLACK wire to Power line BLACK wire.
4. Connect the Fixture White wire to Power line White wire.
5. Connect the Fixture Ground wire to Power line Ground wire.

6. Use U.L. Listed wire connectors suitable for the size, type, and
number of conductors. All wiring must be in accordance with all
applicable NEC Standards

7. No loose strands or loose connections should be present.

8. Place Flat Canopy Plate against Plaster Mud Flange and secure
screws through canopy plate. Make sure to leave about a 1/4" gap of
exposed dry wall. (see below)

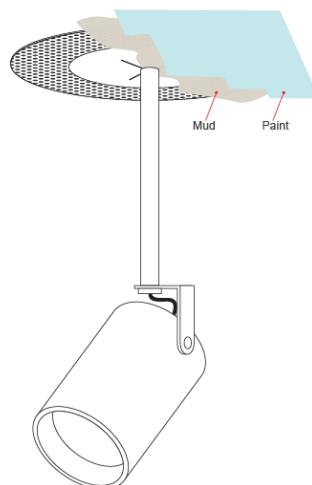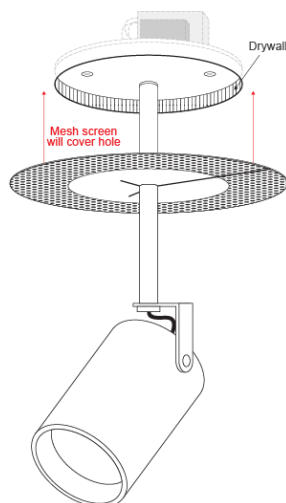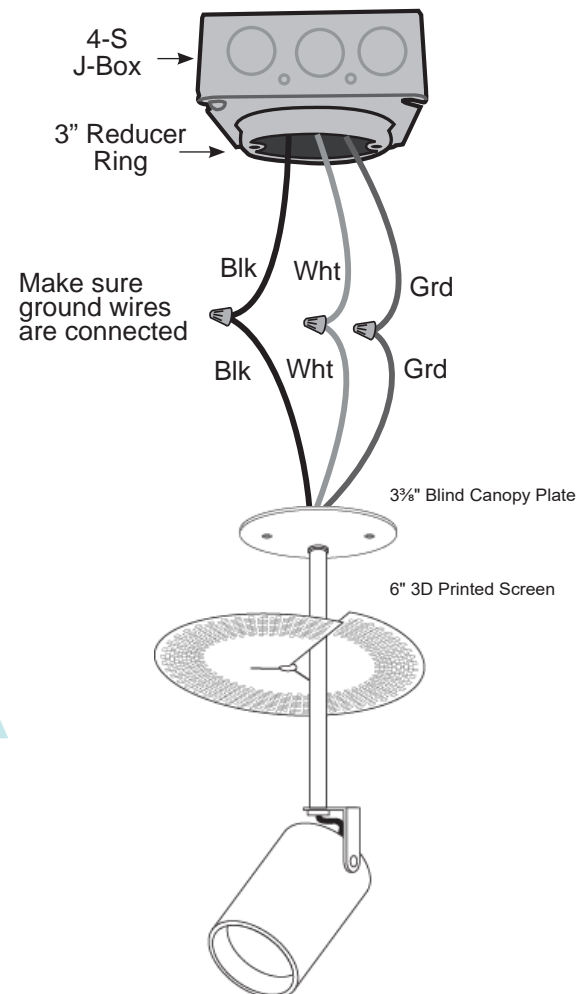

SMR1-201-BCPT-PAR16

Installation Instructions (Retrofit)(Blind Canopy Plate Trimless)




Recommended joint compound.
Must have thick consistency.



To insert mesh into position slightly turn sideways and then slide the mesh screen over the stem with the FLAT SIDE of the screen against the canopy plate.



9. Generously apply joint compound around hole.

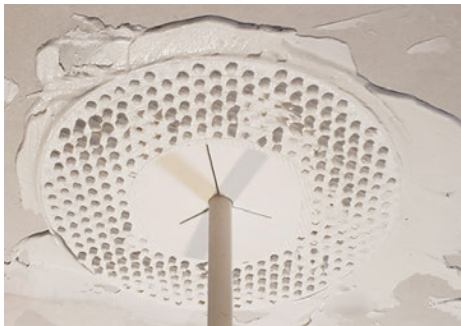


10. Firmly press the screen into the wet joint compound. Make sure the joint compound comes out through the mesh holes and that the mesh is sitting flush against the ceiling.



11. Apply joint compound over mesh screen. Allow to dry and reapply layers as necessary.



12. Sand until smooth then paint. Adjust the angle of fixture to the desired position. Restore electricity and check the operation of your new CLARTÉ light fixture.

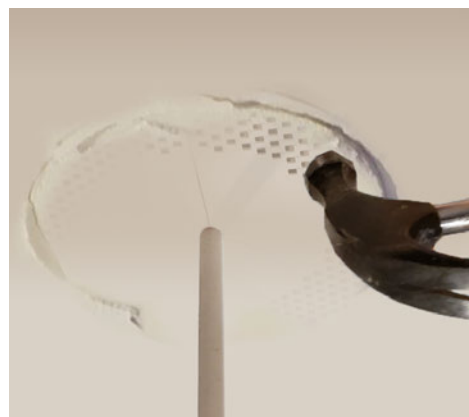

13. To remove fixture for servicing use a hammer to tap around the perimeter of the mesh screen to break apart the joint compound until the trim is free. The mesh screen can be reused if not severely damaged.